



**10.1** X-shaped cut through membrane

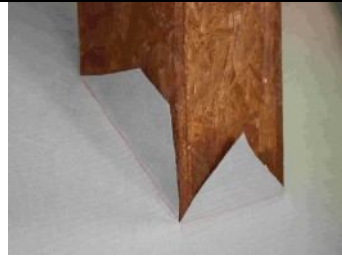

**10.2** triangular overlaps on the chimney / schaft

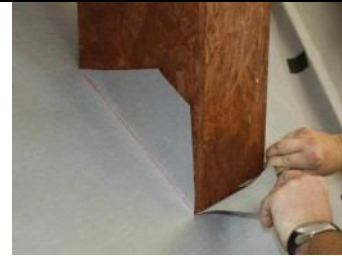

**10.3** trim the triangular membrane overlaps



**10.4** trim the triangular edges around the chimney



**10.5** tape JUTADACH SP SUPER



**10.6** remove the tapes paper cover



**10.13** drainage ditch above the chimney or ventilation schaft



**10.7** stick the bottom membrane overlap on the chimney



**10.8** diagonal cut of the tape at the bottom corner of the chimney



**10.9** sticking of bottom membrane overlap



**10.14** breathable membrane – CHIMNEY – VENTILATION SCHAFT



**10.10** stick the side membrane overlaps on the chimney



**10.11** diagonal cut of the tape at the upper corner of the chimney



**10.12** sticking of upper membrane overlap



**breathable membrane – CHIMNEY  
– VENTILATION SCHAFT**



**breathable membrane – CHIMNEY  
– VENTILATION SCHAFT**

## BREATHABLE WATERPROOF MEMBRANE – CHIMNEY / – VENTILATION SCHAFT

- Lay down on boarding or on rafters the drip ledge and fix it.
- Stick sealing tape JUTADACH SP 38 (JUTAFOL SP1) on the drip ledge.
- Lay down breather roofing underlay horizontally (or vertically) across the roof slope over insulation or rafters. Start from the gutter side of the roof upward to the ridge, with overlaps of min. 10 cm (depends on the slope). Vertical connection of the membrane must be made over the rafter.
- The membrane is fixed to the boarding or rafters with non corrosive flat-headed nails or staples and only over the overlapping area!! Stick the membrane on the drip ledge with sealing tape JUTADACH SP 38 (or tape JUTAFOL SP 1)
- In case of roof slope under 22°, connection of overlaps with connecting tape is recommended (integrated, or tape JDT SP 38).
- Counter battens are installed over the underlay and should not exceed 1,2 m. In case of roof slope under 22°, and in valley between roofs the sealing of counter battens with tape JUTAFOL TPK is recommended. To create rain-resistant roof construction, sealing of counter battens with tape JUTADACH TPK SUPER is necessary.
- **CHIMNEY / VENTILATION SCHAFT** – first make X-shaped cut through the membrane, than place the chimney or ventilation schaft through the cut. (Obr. 10.1-10.2)
- Trim the triangular overlaps. (Obr. 10.3-10.4)
- Stick the membrane on chimney or ventilation schaft with tape JUTADACH SP. Start with the bottom overlap, than continue on both sides and finally stick the upper membrane overlap. (Obr. 10.5-10.12)
- Above the chimney or ventilation schaft the drainage ditch is necessary. (Obr. 10.13-10.14)